

# LoryGateView

# User Manual



## Revision History

Revision Date	Document Ver.	Pages	Description
Sep. 30. 2021	1.0	All	Initial release

# Contents

<b>CH.1</b>	<b>Overview</b>	<b>3</b>
-	Software	3
-	Operating Environment	3
-	Features	3
-	Technical Support	4
<b>CH.2</b>	<b>How to Use</b>	<b>5</b>
-	Auto-Connect	5
-	LoryGateConfig	6
-	Configuration	6
-	Help	7
-	About	7
-	Statistics	8
-	Statistics - Clear all	8
-	Statistics - Clear port	9
-	Statistics - Reset	9
-	Statistics - Scope	10
-	TxRxViewForm - Hex, String Radiobutton	10
-	TxRxViewForm - Save	11

# CH1. Overview

LoryGateView is a Windows application that provides real-time monitoring of LoryGate products from a remote location supplied and sold by SystemBase Co., Ltd.

## Software

It is a Windows application and runs on Windows with the following execution file:

LoryGateView.exe

## Operating Environment

- CPU recommendation : Pentium 1Ghz or higher
- Memory : 512Mb or higher
- OS : Windows 7/8/10
- Network : 10M Ethernet or higher

## Features

- Auto-Connect: When the IP address and port number of LoryGateView corresponding to LoryGate equipment are specified, it is automatically listed in LoryGateView.
- LoryGateConfig: Runs LoryGateConfig.
- Configuration: Runs the setting window of LoryGateView.
- Help: Runs the LoryGateView manual.
- About: Outputs the version information of LoryGateView.
- Statistics: When double-click the connected equipment list, the detail information of the corresponding LoryGate are output.
- Clear all: Initializes TX, RX values of all ports.
- Clear port: Initializes TX, RX values of the selected port.

- Reset: Initializes the selected port.
- Scope: Outputs a TxRxViewForm that checks the TX and RX data of the selected port.
- Hex, String: Outputs TX, RX Data in the selected type.
- TX, RX Save: Save the contents of TX or RX as a txt file.

## Technical Support

SystemBase provides technical support to customers in three ways.

1. If you visit technical support on our website <http://www.sysbas.com/>, you can receive technical support through frequently asked questions(FAQs) or boards.
2. If you send an email to the technical supported team([tech@sysbas.com](mailto:tech@sysbas.com)), you can receive an answer in a short time.
3. If you want faster technical support, you can get customer support over the phone. The phone number is +82-2-855-0501.


# CH2. How to Use

## Auto-Connect


If the LoryGate existing on the network specifies the IP address and port number of the corresponding LoryGateView, it is automatically listed in LoryGateView.

The name and MAC-Address information of the listed equipment are displayed.

Double-click on the equipment to output a detailed information window.

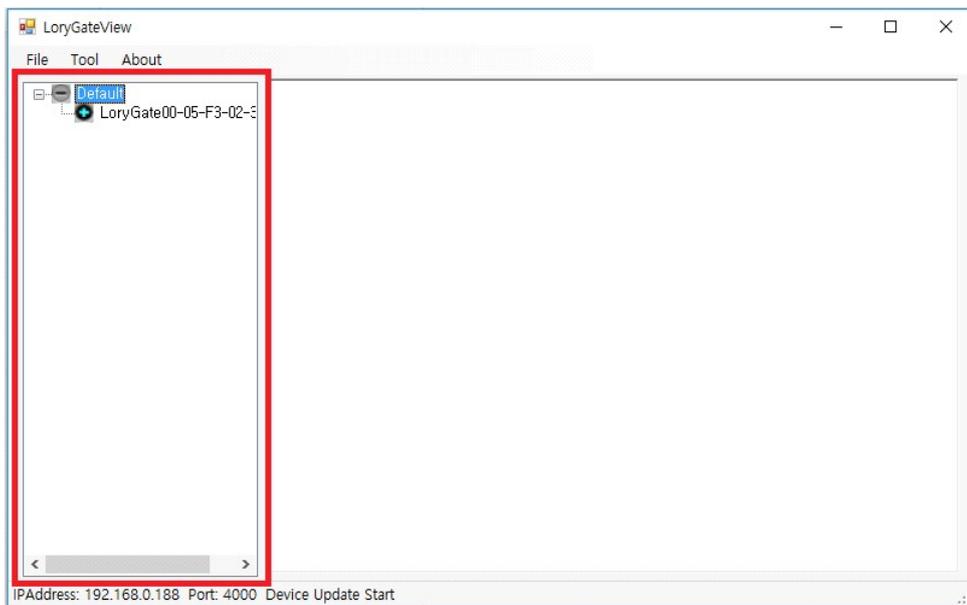

The connection state of the corresponding equipment is displayed as an icon image, and the image is updated in real time according to the connection state.

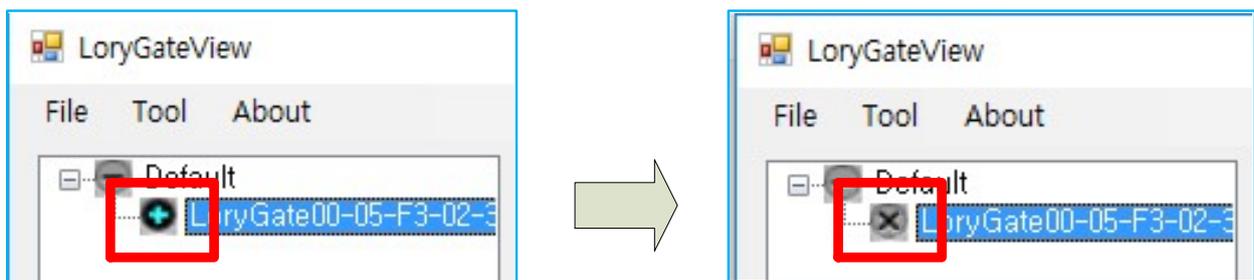


## LoryGateConfig

Tool - LoryGateConfig menu.

Click the menu to run LoryGateConfig utility.

Please refer to the LoryGateConfig manual for LoryGateConfig features.

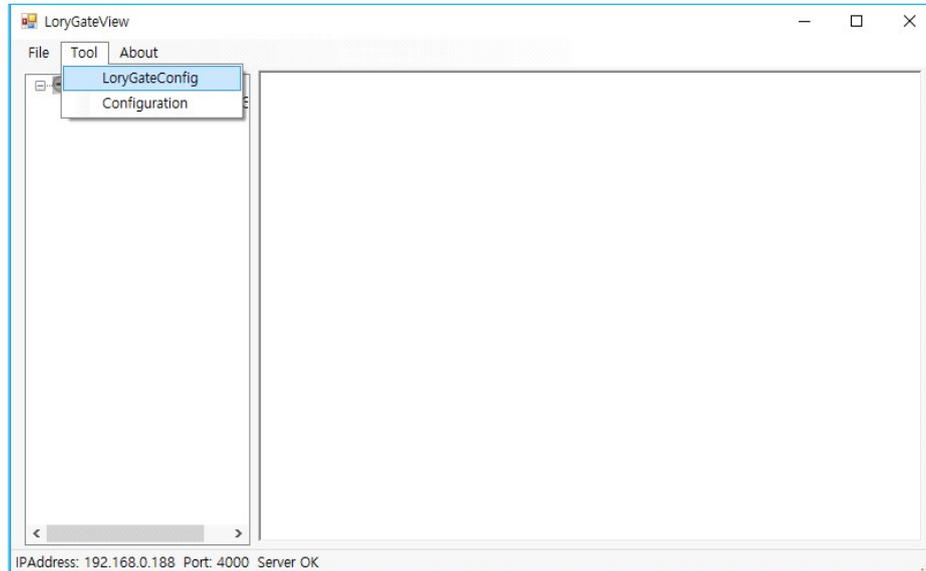


## Configuration

Tool - LoryGateConfig menu.

The Configuration window is displayed.


You can set the Alive message transmission cycle with the equipment and set the port number of LoryGateView. Press the [Save] button to change the LoryGateView setting with changed information.

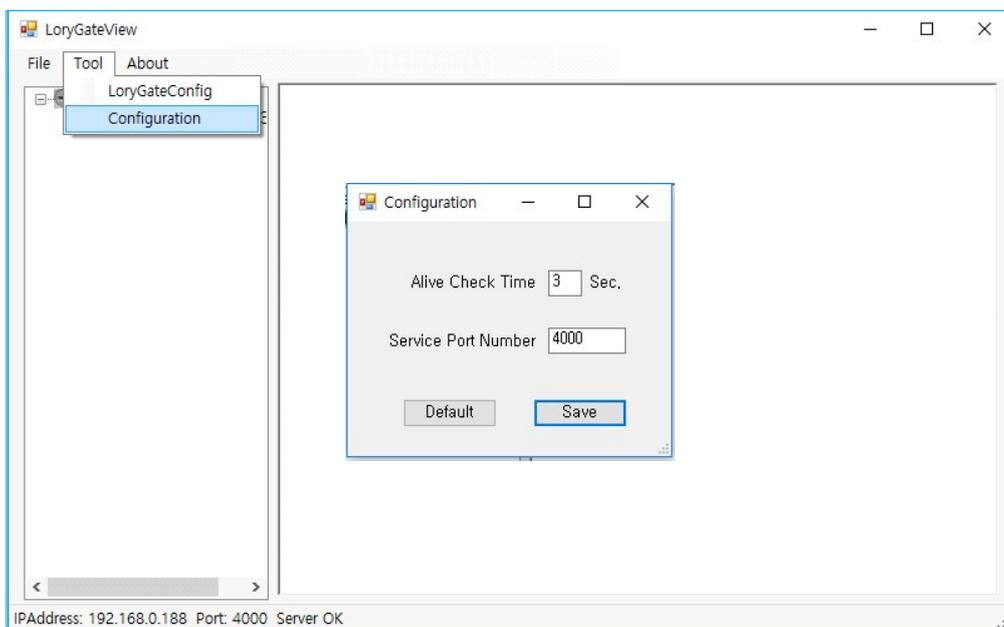

## Help

About - Help menu.


LoryGateView manual will be displayed.

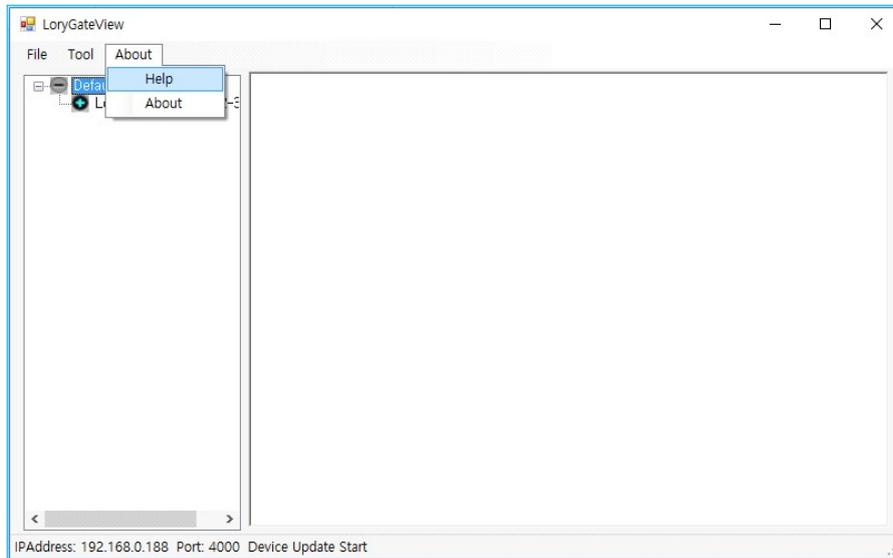

## About

About - About menu.

Version information of running LoryGateView will be displayed.

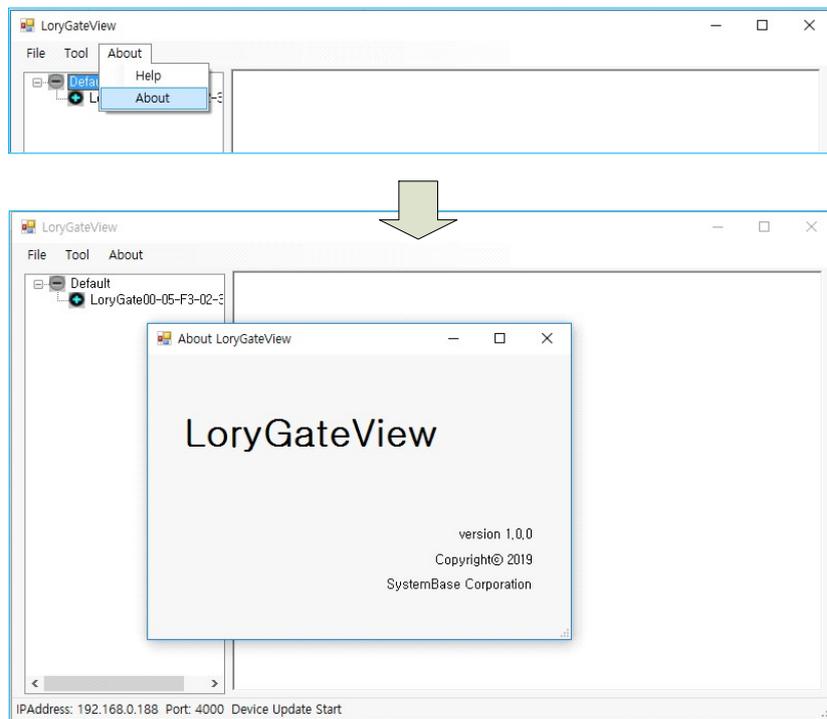




- Port: Indicates the number and connection status of the LoRa port.



- Name: Shows the operation mode of the LoRa port.
- Tx Bytes: Shows Byte of data transmitted to the LoRa Port.
- Rx Bytes: Shows Byte of data received from the LoRa Port.
- Channel: shows the set LoRa channel.
- Spreading Factor: Shows the set value of the spreading factor of the set LoRa.
- AES: Shows the AES encryption settings used by LoRa.
- LoKetVer: Shows the protocol version used by LoRa.


## Statistics - Clear all

The amount of TX and RX data transmission of all ports existing in the equipment is cleared to 0.

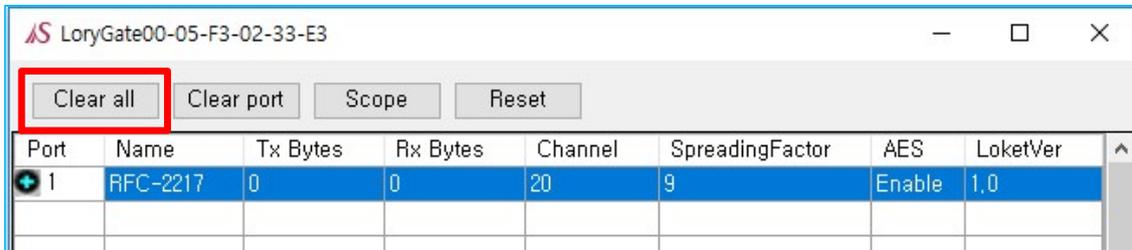

## Statistics - Clear port

The amount of TX and RX data transmission of the selected port among the ports of LoryGate is cleared to 0.

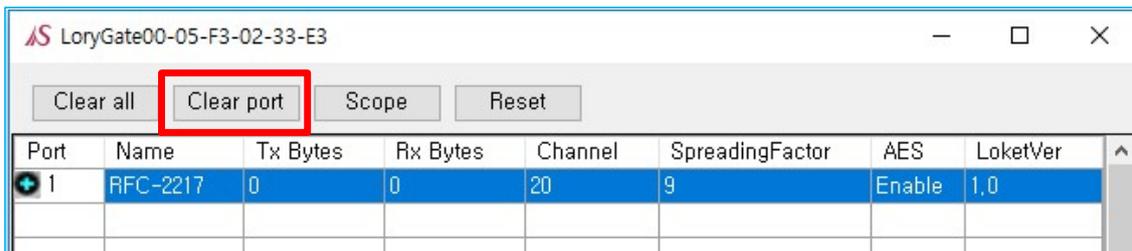

## Statistics - Reset


Delivers the command to Reset the selected port to LoryGate.

The LoryGate that received the command restarts the socket of the corresponding port. This is not applied to RFC-2217 operating as a separate protocol.




## Statistics - Scope

Outputs TxRxViewForm which can check TX and RX information of the selected port in real time. You can check the Data delivered through TX and RX at the Form.

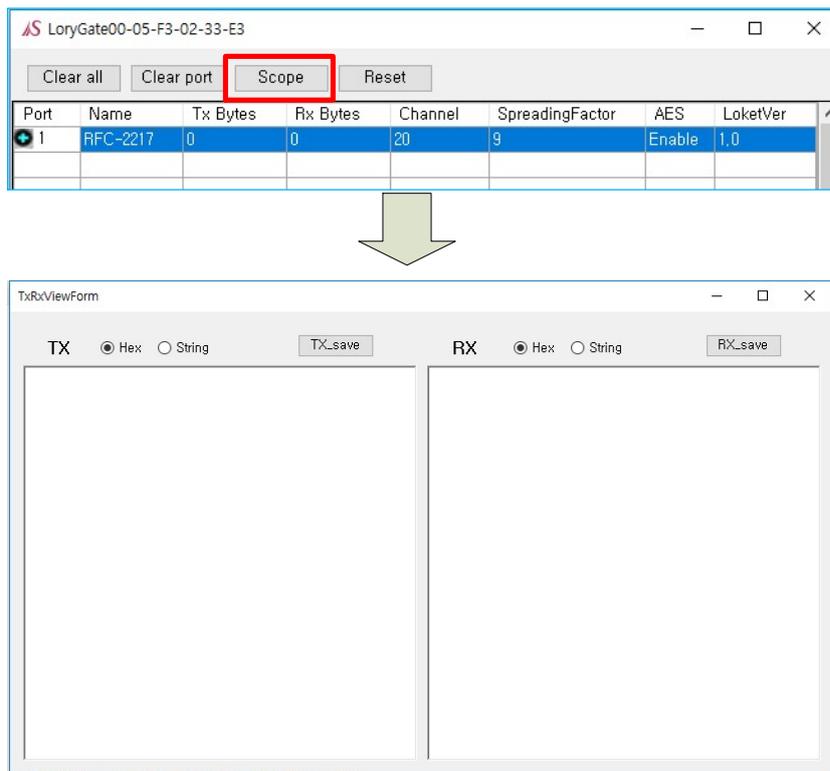

## TxRxViewForm - Hex, String Radiobutton

Outputs values of TX and RX output values as Hex and string according to Radiobutton setting.

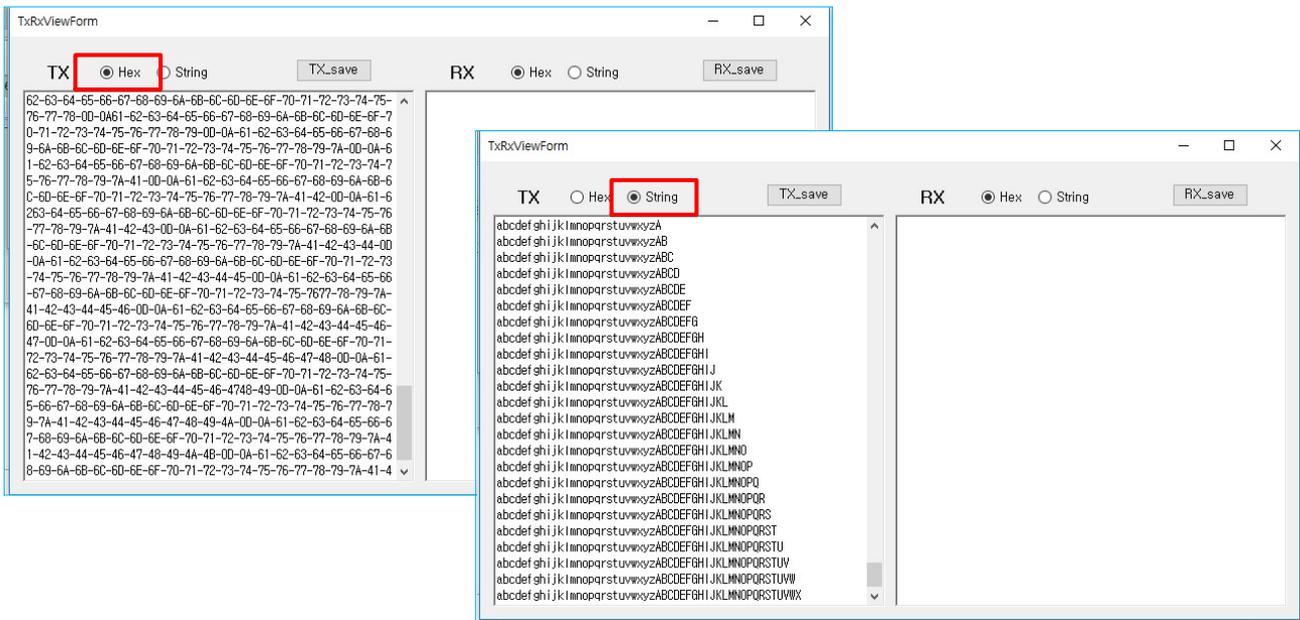

## TxRxViewForm - Save

Save the TX Data or RX Data output on the screen to txt file.



If you have any inconvenience while using the product, please contact us.

**Email:**

- Purchase/Quotation: [overseas@sysbas.com](mailto:overseas@sysbas.com)
- Technical Support/RMA: [tech@sysbas.com](mailto:tech@sysbas.com)

**www.sysbas.com**

**Tel: +82-2-855-0501**

**Fax: +82-2-855-0580**

**Working Hour**

**MON ~ FRI 9:00 ~ 18:00**